

TECH TIPS

SERVICE CALL:

Bleeding out air trapped in the Platform Auto Level Master/Slave circuit Z45/25 Z45/25J Only

TOOLS NEEDED:

None

MODELS:

Z45/25, Z45/25J Internal Combustion

Only Do not use this method for other lifts Damage could accrue.



Tech Tips Safety Rules



Danger

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

Do Not Perform Maintenance Unless:

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.

Step 1
Starting with the machine in the stowed position.



Step 2
Go to the ground controls. Turn the key to the ground position and pull the stop button out.



Step 3

At the ground controls, start the engine and allow for sufficient warm up.

Step 4

At the ground controls, engage the enable toggle switch and the secondary boom up toggle switch. Raise the secondary boom approximately 10 feet.



TECH TIPS



Step 5

At the ground controls, engage the enable, the primary boom up, and the platform level up toggle switches all at the same time. Hold all three until the boom up and the platform level up both come to end of movement (deadhead).

