Service Call:

Customer wants to have the functions cut-out when charging the batteries

Tools Needed: Zipties

Model:

Slab Scissor/GR





Tech Tips Safety Rules



Danger

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

Do Not Perform Maintenance Unless:


- You are trained and qualified to perform maintenance on this machine.
- > You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - o applicable governmental regulations
- ➤ You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.



Step 1

The interlock option is only on the black signet charger. Open up the battery tray to access the signet charger. There is a white and black wire coming off the back side of the charger.

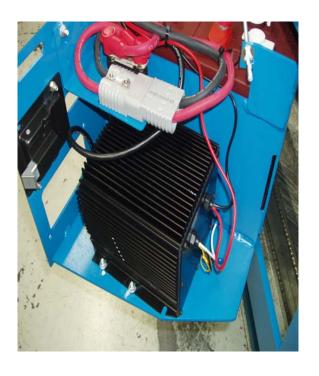

Step 2

You will want to route the white and black wires from the charger with the red and black cables coming from the batteries.





Step 3

Route the white and black wires over to the motor controller in the hydraulic tray.



Step 4

There should be a white and black wire crimped together on terminal 1 of the motor controller.





Step 5

Disconnect the white and black wire that are crimped together from terminal 1 of the motor controller and connect it to the black wire coming from the charger. Connect the white wire from the charger back to terminal 1 of the motor controller.



Step 6

Plug in the charger. The machine functions should not operate with the charger plugged in.

If you should have any questions, please feel free to contact the Genie Industries Service Dept at 800-536-1800