

# TECH TIPS

Service Call:

## **How to Set 12K Generator**

Tools Needed:

Meter that reads HZ  
Sentry Seal

Model:

## **S40 through Z135**



## Tech Tips Safety Rules



### **Danger**

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

### **Do Not Perform Maintenance Unless:**

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
  - manufacturer's instructions and safety rules
  - employer's safety rules and worksite regulations
  - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.

# TECH TIPS



## Step 1

Locate and open white generator box.



## Step 2

Start machine and turn generator on.




## Step 3

Set meter to HZ and put red lead to black wire on 110V outlet.



## Step 4

Adjust potentiometer until 63 HZ is obtained with no load.

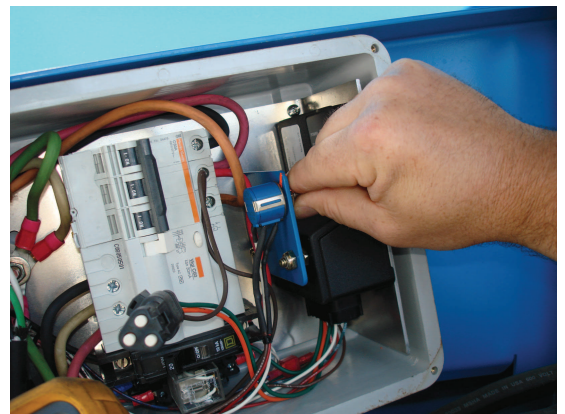


# TECH TIPS



## Step 5

Install Sentry seal to potentiometer.

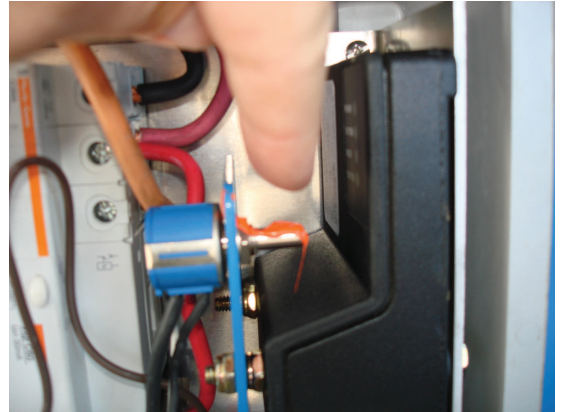

## Step 6

Turn off generator and close box.

